

LB White Construction Heater Quick Parts Reference (LP Gas Only)

Model#	Motor	Thermocouple/ Ignition Control/ D.S.I.	Valve: Safety/ Auto Control	Fan/Squirrel Cage	Safety Switches	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Transformer	Other
286 286A	20290	NA	05547	02808	05550 Air Proving 05559 Flapper 07264 Limit (286A)	06479	06772	05560	20704 (10ft)	NA	05548 Manual Shut-Off Valve 05568 Thermostat With Bracket 07027 Wiring Harness
286B	20290	NA	05547	02808	05550 Air Proving 05559 Flapper 05566 Limit (350)	06479	06772	05560	20704 (10ft)	NA	05548 Manual Shut-Off Valve 05568 Thermostat With Bracket 07027 Wiring Harness
290 290A	20554	NA	05547	02684	07264 Limit (350) 02680 Air Proving 02441 Flapper	06479	09911	02691	20704 (10ft)	NA	05548 Manual Shut-Off Valve 05568 Thermostat With Bracket 09160 Wheel (Qty 2)
290B	20554	NA	05547	02684	05566 Limit (350) 02680 Air Proving 02441 Flapper	06479	09911	02691	20704 (10ft)	NA	05548 Manual Shut-Off Valve 05568 Thermostat With Bracket 07027 Wiring Harness
292A	03830	NA	05144 (Call)	03831	03933 Limit (275) 04605 Air Flow 03948 Flame Rod	03849	04655	05303	04784 (10ft)	06979	03834 On-Off Switch 05148 Wiring Harness 04724 Valve Cock Assy
292E	03830	NA	05309	21575	06739 Air Proving 06687 Backflash	07160	06772	05851	20704 (10ft)	NA	03834 On-Off Switch 07027 Wiring Harness
296 296A	03830	NA	03837	03831	03933 Limit (275) 04605 Air Flow 03948 Flame Rod	03849	03836	03860	03535 (10ft)	06979	03834 On-Off Switch
296B	03830	NA	05144 (Call)	03831	03933 Limit (275) 04605 Air Flow 03948 Flame Rod	03849	04655	03860	04784 (10ft)	06979	03834 On-Off Switch 05148 Wiring Harness
296D	03830	NA	05549	21575	05688 Flame Rod 07161 Sail Switch	05687	06772	05849	20704 (10ft)	NA	03834 On-Off Switch 05845 Valve Cock Assy 05854 Fuse, Thermal Assy
296E	03830	NA	05309	21575	06739 Air Proving 06687 Backflash	07160	06772	06685	20704 (10ft)	NA	03834 On-Off Switch 07027 Wiring Harness
301A	03830	NA	03986	03831	03933 Limit (275) 04605 Air Flow 03843 Flame Rod	03849	03836	03860	03535 (10ft)	06979	03834 On-Off Switch
304B	04785	NA	05867	04794	03933 Limit (275) 03326 Air Flow 03843 Flame Rod 09224 Tilt	03849	04791	04665	20704 (10ft)	06979	03834 On-Off Switch 04977 Valve Cock Assy 05829 Thermostat 05149 Wiring Harness
304D	04719	NA	08022	06697	06664 Backflash 07161 Sail 09224 Tilt	06873 Plug OR 20312 Electrode	08997	06571	20704 (10ft)	NA	03834 On-Off Switch 05829 Thermostat 04720 Capacitor 06871 Throttling Valve
324	07181	01090	NA	01227	02990 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	NA	21788	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	06537 Thermostat 01099 Wheel 20598 Manual Shut Off Valve
324E 324F	07181	01090	NA	01227	20356 Thermo Electric 7111NR Power Coil	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	20598 Manual Shut Off Valve 01098 Hose Adapter 01099 Wheel
324G	07181	01020	NA	01227	02812 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	20598 Manual Shut Off Valve 01098 Hose Adapter 01099 Wheel
324H	07181	01090	NA	01227	07966 Thermo Electric 7111NR Power Coil	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	20229 Manual Shut Off Valve 01098 Hose Adapter 01099 Wheel

LB White Construction Heater Quick Parts Reference (LP Gas Only)

Mode#	Motor	Thermocouple/ Ignition Control/ D.S.I.	Valve: Safety/ Auto Control	Fan/Squirrel Cage	Safety Switches	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Transformer	Other
326	07181	01020	02990 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	01227	NA	NA	21788	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	06537 Thermostat 20598 Manual Shut Off Valve
326H	07181	01020	02812 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	01227	NA	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	06537 Thermostat 01098 Hose Adapter 01099 Wheel
326J	07181	01020	02990 Solenoid AND 07966 Thermo Electric 7111NR Power Coil	01227	NA	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	NA	07339 Thermostat 01098 Hose Adapter 01099 Wheel
328	07181	01090	02990 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	01227	NA	NA	21788	01230 Pilot 03415 Burner	01229 (10ft) 2525LH (25ft)	NA	06537 Thermostat 20598 Manual Shut Off 01098 Hose Adapter
328F	07181	01090	02990 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	01227	NA	NA	01106	01230 Pilot 03415 Burner	01229 (10ft) 2525LH (25ft)	NA	06537 Thermostat 20598 Manual Shut Off Valve 01099 Wheel
330 330G	07181	01020	02990 Solenoid AND 20356 Thermo Electric 7111NR Power Coil	01227	NA	NA	21788	01230 Pilot 03415 Burner	01229 (10ft) 2525LH (25ft)	NA	06537 Thermostat 01098 Hose Adapter 01099 Wheel
334 334G	07181	01020	20356 Thermo Electric 7111NR Power Coil	01342	NA	NA	21788	01230 Pilot 03416 Burner	01229 (10ft) 2525LH (25ft)	NA	01098 Hose Adapter 20229 Manual Shut Off Valve 01099 Wheel (Qty 2)
334H	07181	01020	20356 Thermo Electric 7111NR Power Coil	01342	NA	NA	01106	01230 Pilot 03416 Burner	01229 (10ft) 2525LH (25ft)	NA	01098 Hose Adapter 20229 Manual Shut Off Valve 01099 Wheel (Qty 2)
343G	20290	03497	02309	02808	05566 Limit (350)	NA	01225	02689 Pilot 03411 Burner	01229 (10ft) 2525LH (25ft)	NA	05568 Thermostat 05548 Manual Shut Off Valve
346A	01174	01036	01196	02808	02662 Limit	NA	01225	02729 Pilot 02805 Burner	01229 (10ft) 2525LH (25ft)	NA	01208 Thermostat
346E 346F	20290	03497	02309	02808	05566 Limit (350)	NA	06772	02729 Pilot 03418 Burner	20543 (10ft)	NA	05548 Manual Shut Off Valve 05567 High Limit Switch Cover 00815 Sediment Trap
346G 346H 346J 346K	20290	03497	02309	02808	05566 Limit (350)	NA	01225	02689 Pilot 03418 Burner	01229 (10ft) 2525LH (25ft)	NA	05568 Thermostat 05548 Manual Shut Off Valve
346K	20290	03497	86302	02808	05566 Limit (350)	NA	06772	02729 Pilot 03418 Burner	20543 (10ft)	NA	05548 Manual Shut Off Valve 05567 High Limit Switch Cover 00815 Sediment Trap
350	01174	01036	02309	01190	02662 Limit	NA	06772	02689 Pilot 01296 Burner	5010 (10ft) 5025 (25ft)	NA	3850FTG Hose to Regulator Fitting 01208 Thermostat 01420 Manual Shut Off Valve
377J 377J-3 377J-4	20554	03497	02309	03531	05566 Limit (350) 02680 Sail Switch	NA	06772	02689 Pilot 03518 Burner	20704 (10ft)	NA	06537 Thermostat 05548 Manual Shut Off Valve 03535 Hose to Regulator Fitting
408J 408J-3 408J-4	20554	01090	02309	02684	05566 Limit (350) 02680 Sail Switch	NA	09911	02689 Pilot 02691 Burner	20704 (10ft)	NA	06537 Thermostat 05548 Manual Shut Off Valve
CPT100A CPT100B	03830	NA	08810 (24Volt)	21575	06739 Air Proving 06687 Back Flash	07160	06772	05851	20704 (10ft)	08260	08240 On-Off Switch 08811 L.E.D. With Leads 03536 Hose to Regulator Fitting
CPT100BSP	03830	NA	08810 (24Volt)	21575	07161 Sail Switch 06687 Back Flash	07160	06772	05851	20704 (10ft)	08260	08240 On-Off Switch 08811 L.E.D. With Leads 03536 Hose to Regulator Adapter

LB White Construction Heater Quick Parts Reference (LP Gas Only)

Model#	Motor	Thermocouple/ Ignition Control/ D.S.I.	Valve: Safety/ Auto Control	Fan/Squirrel Cage	Safety Switches	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Transformer	Other
CP100C	21830	21811	NA	21808 7111NR Power Coil	21855 Back Flash	21803	21856	21802	21841 (10ft)	21813 Spark Igniter	21816 Relay with Clips 21806 Heat Adjustment Valve 06654 Hose Adapter
CP155A CP155B	03830	NA	08810 (24Volt)	21575	06739 Air Proving 06687 Back Flash	07160	06772	06685	20704 (10ft)	08260	08240 On-Off Switch 08811 L.E.D. With Leads 03536 Hose to Regulator Adapter
CP155BSP	03830	NA	08810 (24Volt)	21575	07161 Sail Switch 06687 Back Flash	07160	06772	06685	20704 (10ft)	08260	08240 On-Off Switch 08811 L.E.D. With Leads 03536 Hose to Regulator Adapter
CP155C	03830	NA	22301 (24 Volt)	21575	06687 Back Flash 06739 Air Proving	07160	06772	06685	21841 (10ft)	06979	22213 Thermostat 03834 On-Off Switch
CP155C (Diagnostic)	03830	NA	07637 (120 Volt)	21575	06687 Back Flash 06739 Air Proving	07160	06772	06685	21841 (10ft)	NA	07027 Wire Harness 03834 On-Off Switch 22213 Thermostat
CP380A CP380B	04719	NA	22301 (24 Volt)	09347	06687 Back Flash 06739 Air Proving	07160	06772	06685	21841 (10ft)	06979	22299 L.E.D. Lens 05549 Manual Valve 22213 Thermostat
CP380BSP	04719	NA	08810 (24Volt)	06697	06664 Back Flash 07161 Air Flow 20076 Tilt Switch	20312	08997	20410	20719 (10ft)	08958	04720 Capacitor 08811 L.E.D. With Leads 08240 On/Off Switch
CP400A	04719	NA	098884-01	06697	06739 Air Proving 06664 Back Flash	20312	08997	20410	20704 (10ft)	NA	06871 Throttle Valve 04720 Capacitor 08811 L.E.D. With Leads
CP400B	04719	NA	07637	22302	22526 Air Proving 22294 Back Flash	20312	22315	20410	21841 (10ft)	NA	04720 Capacitor 06871 Throttle Valve 05829 Thermostat
CP400B (Diagnostic)	04719	NA	22301 (24 Volt)	22302	22526 Air Proving 22294 Back Flash	20312	22315	20410	21841 (10ft)	06979	06971 Throttle Valve 04720 Capacitor 03834 On/Off Switch
CP400T	04719	NA	07637	06697	06739 Sail 20411 Back Flash	20312	08997	20410	20704 (10ft)	NA	22213 Thermostat 04720 Capacitor 22299 L.E.D.
CP400T (Diagnostic)	04719	NA	08810 (24Volt)	06697	06739 Sail 20411 Back Flash	20312	08997	20410	20704 (10ft)	08958	03834 On/Off Switch 05829 Thermostat 04720 Capacitor 08811 L.E.D.
CS060	20290	03497	NA	02309	05566 Limit (350)	NA	06772	02689 Pilot 03418 Burner	01517 (10ft)	NA	05548 Manual Valve 06537 Thermostat
CS080C CS080D	08920	NA	08810 (24Volt)	03531	03933 Limit (275) 09821 Limit (250)	06479	08990	09753	20704 (10ft)	08922	09454 Thermostat
CS080E	08920	NA	08810 (24Volt)	03531	03933 Limit (275) 09821 Limit (250) 21186 Air Proving	06479	08990	09753	20704 (10ft)	08922	09454 Thermostat
CS170D CS170E	20169	NA	08810 (24Volt)	09050	03933 Limit (275) 09784 Limit (190) 09925 Air Proving	06479	09911	09786	20704 (10ft)	08922	09160 Wheel (Qty 2) 06421 Axle 09454 Thermostat
CT080A CT1080B	08920	NA	08810 (24Volt)	03531	03933 Limit (275)	06479	08990	08918	20704 (10ft)	08922	09454 Thermostat 08872 L.E.D. With Leads

LB White Construction Heater Quick Parts Reference (LP Gas Only)

Model#	Motor	Thermocouple/ D.S.I.	Ignition Control/ D.S.I.	Valve: Safety/ Auto Control	Fan/Squirrel Cage	Safety Switches	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Transformer	Other
CT170A CT170B	22112	NA	08810 (24Volt)	22039	09050	03933 Limit (275)	06479	09911	09130	20704 (10ft)	08922	09160 Wheel (Qty 2) 09454 Thermostat 08872 L.E.D. With Leads
TS080C TS080D	08920	NA	08810 (24Volt)	22076	03531	03933 Limit (275) 09821 Limit (250) 09821 Limit (250)	06479	08990	09753	20243 (10ft)	08922	09454 Thermostat 09915 Heat/Vent Toggle Switch 08811 L.E.D. With Leads
TS080E	20292	NA	08810 (24Volt)	22076	03531	03933 Limit (275) 09821 Limit (250) 21186 Air Proving	06479	08990	09753	20243 (10ft)	08922	09454 Thermostat 22017 Heat/Vent Rocker Switch 08811 L.E.D. With Leads
TS170C	20169	NA	08810 (24Volt)	22076	09050	03933 Limit (275) 09784 Limit (190) 09925 Air Proving	06479	09911	09786	20704 (10ft)	08922	09160 Wheel (Qty 2) 09915 Heat/Vent Toggle 09454 Thermostat
TS170D	20169	NA	08810 (24Volt)	22076	09050	03933 Limit (275) 09784 Limit (190) 09925 Air Proving	06479	09911	09786	20704 (10ft)	08922	22017 Rocker Switch (with L.E.D.) 09454 Thermostat 09160 Wheel (Qty 2)
TS350	22908	NA	08810 (24Volt)	22897	22868	81108 Limit (325) 09784 Limit (190) 22946 Air Proving	06479	22919	22898	23079 (10ft) 23078 (15ft)	09615	08685 Relay 22017 Rocker Switch (with L.E.D.) 22914 Wheel (Qty 2) 23130 Caster (Qty 2) 23129 Belt 22920 Thermostat

LB White Quick Parts Reference (Natural Gas)

Model#	Motor	Thermocouple/ D.S.I.	Ignition Control/ D.S.I.	Valve: Safety/ Auto Control	Fan/Squirrel Cage	Safety Switches	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Transformer	Other
298E	03830	NA	098884-01	05309	21575	06739 Air Flow 06687 Back Flash	07160	06713	06686	20704	NA	03834 On-Off Switch 07028 Wiring Harness
303A	04785 (With Capacitor)	NA	6183NR (Call)	05335	05336	03933 Limit 03326 Air Flow 03843 Flame Rod 04803 Tip Switch	03849	04799	05323	NA	06979	03934 On-Off Switch 05829 Thermostat 04805 Thermostat Knob
336 336E 336G	07181	03066	NA	20356 Thermo Electric 7111NR Power Coil	01342	NA	NA	01104	01520 Pilot 01081 Burner	20704	NA	09698 Manual Control Valve 01099 Wheel (Qty 2)
345G	20290	03497	NA	02309	02808	05566 Limit	NA	01326	02740 Pilot 03412 Burner	05301	NA	05568 Thermostat 05548 Manual Shut-Off Valve
348A	01174	01036	NA	01196	02808	02662 Limit	NA	01326	02740 Pilot 01514 Burner	20704	NA	01208 Thermostat 02741 Pilot Mixer
348E 348F	20290	03497	NA	02309	02808	05566 Limit	NA	01326	02740 Pilot 01297 Burner	20504	NA	05548 Manual Shut-Off Valve 05568 Thermostat 05567 High Limit Switch Cover
348G 348H 348J	20290	03497	NA	02309	02808	05566 Limit	NA	01326	02740 Pilot 01297 Burner	05301	NA	05568 Thermostat 05548 Manual Shut-Off Valve 05567 High Limit Switch Cover
348K	20290	03497	NA	86302	02808	05566 Limit	NA	01326	02740 Pilot 01297 Burner	05301	NA	05568 Thermostat 05548 Manual Shut-Off Valve 05567 High Limit Switch Cover
352	01174	01036	NA	02309	01190	02326 Limit	NA	01326	02740 Pilot 01297 Burner	NA	NA	01208 Thermostat 01420 Valve Cock 02741 Pilot Mixer

LB White Quick Parts Reference (Natural Gas)

Model#	Motor	Thermocouple/ Ignition Control/ D.S.I.	Valve, Safety/ Auto Control	Fan/Squirrel Cage	Safety Switches	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Transformer	Other	
379J 379J-3 379J-4	20554	03497	NA	02309	03531	05566 Limit 02680 Sail Switch	NA	02736	02740 Pilot 03519 Burner	20704	NA	05548 Manual Shut-Off Valve 06537 Thermostat
410J 410J-3 410J-4	02683	01090	NA	02309	02684	05566 Limit 02680 Sail Switch	NA	02736	06978 Pilot 02735 Burner	20704	NA	05548 Manual Shut-Off Valve 06537 Thermostat
CP155BSN	03830	NA	08810	06623	21575	06687 Back Flash 05689 Sail Switch	07160	06713	06683	20704	08260	08240 On-Off Switch 08810 L.E.D. With Leads
CP155C	03830	NA	22301 (24 Volt)	22400 (24 Volt)	21575	06687 Back Flash 06739 Air Proving	07160	06713	06686	20504	06979	05548 Manual Shut-Off Valve 22213 Thermostat 03834 On-Off Switch
CP155C	03830	NA	07637 (120 Volt)	05144 (120 Volt)	21575	06687 Back Flash 06739 Air Proving	07160	06713	06686	20504	NA	05548 Manual Shut-Off Valve 22213 Thermostat 03834 On-Off Switch
CP155C (Diagnostic)	03830	NA	22301	22400	09347	06887 Back Flash 06739 Air Proving	07160	06713	06686	20504	06979	22299 L.E.D. Lens 05548 Manual Shut-Off Valve 08240 On-Off Switch
CS060	20290	03497	NA	02309	02808	05566 Limit	NA	01326	02740 Pilot 01297 Burner	20704	NA	06537 Thermostat 05548 Manual Shut-Off Valve
CS080C CS080D	08920	NA	08810	09368	03531	03933 Limit (275) 09821 Limit (250)	06479	21999	09754	20531	08922	09454 Thermostat
CS080E	20292	NA	08810	09368	03531	03933 Limit 21186 Air Proving	06479	21999	09754	20531	08922	09454 Thermostat

LB White Quick Parts Reference (Convection)

Model#	Thermocouple	T.E. Safety Valve	Igniter/Electrode	Regulator	Orifice: Pilot/Burner	Hose	Other
320	01090	20356 7111NR Power Coil	NA	06228	01230 Pilot 01329 Burner	01229 (10ft) 2525LH (25ft)	20598 Manual Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
320B	01090	07966 7111NR Power Coil	NA	21788	01230 Pilot 22353 Burner	01229 (10ft) 2525LH (25ft)	20229 Burner Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
322	01090	20356 7111NR Power Coil	NA	21788	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	20598 Burner Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
322F	01090	20356 7111NR Power Coil	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	20598 Burner Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
322G	01090	07966 7111NR Power Coil	NA	01106	01230 Pilot 01591 Burner	01229 (10ft) 2525LH (25ft)	20229 Burner Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
340	03497	07966 7111NR Power Coil	NA	07960	01230 Pilot 07942 Burner	01229 (10ft) 2525LH (25ft)	07969 Burner Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
340A	03497	07966 7111NR Power Coil	06434 Piezo 07975 Electrode	07960	01230 Pilot 07942 Burner	01223 (10ft) 2525LH (25ft)	07969 Burner Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
340	03497	07966 7111NR Power Coil	20280 Piezo 07975 Electrode	21722	01230 Pilot 07942 Burner	20703 (10ft)	07969 Burner Shut-Off Valve 01098 Hose Adapter G1629 P.O.L. Fitting
341	01090	20356 7111NR Power Coil	NA	21788	01230 Pilot 01329 Burner	01229 (10ft) 2525LH (25ft)	20598 Manual Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
341G	01090	20356 7111NR Power Coil	NA	01106	01230 Pilot 01329 Burner	01229 (10ft) 2525LH (25ft)	20598 Manual Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
341H 342G	01090	20356 7111NR Power Coil	NA	21788	01230 Pilot 01329 Burner	01229 (10ft) 2525LH (25ft)	20598 Manual Shut-Off Valve 01098 Hose Adapter 01722 Pilot Screen
380 380J	03497	01540	NA	06772	02689 Pilot 06237 Burner	20704 (10ft)	03536 Hose Adapter
CV100	03555	07966 7111NR Power Coil	20280 Piezo 20184 Electrode	21722	20213 Pilot 20187 Burner	20496 (10ft)	20229 Burner Shut-Off Valve 01098 Hose Adapter 20391 Inlet Screen
CV200	03497	07966 7111NR Power Coil	20280 Piezo 07975 Electrode	21722	01230 Pilot 07942 Burner	20703 (10ft)	07969 Burner Shut-Off Valve 01098 Hose Adapter 01722 Inlet Screen
CV225	03555	07966 7111NR Power Coil	20280 Piezo 20184 Electrode	23463	01230 Pilot 23392 Burner	23731 (10ft)	20229 Burner Shut-Off Valve 08435 Hose Adapter
CV250	03555	07966 7111NR Power Coil	20280 Piezo 20184 Electrode	21722	20212 Pilot 20189 Burner	20496 (10ft)	20229 Burner Shut-Off Valve 01098 Hose Adapter